


Product Installation Guide

Product Range

STAIR RODS - The Akeman Collection™

Measuring:

When measuring for stair rods an additional 100mm is desirable having considered the width of the staircase available, e.g. - for a carpet runner of 686mm (27"), wide the overall rod size required tip to tip is 786mm minimum.

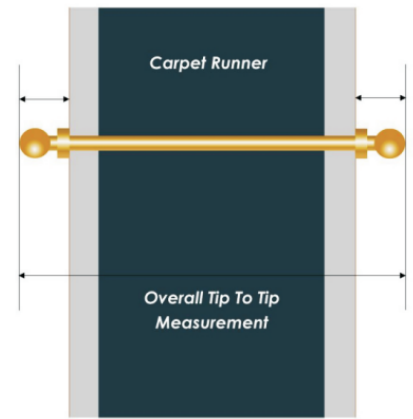

Installation:

1. Fix the eyes into tread riser directly alongside the edge of the carpet runner, leaving a gap of approximately 3mm (1/8").
2. For concrete stairs use rawl plugs for screw fixings.
3. When fixing to timber stairs, direct screw into tread and riser. Note, if wood is particularly hard, it may be required to pilot drill before fixing with screws.
4. Stair rods are for aesthetic purpose only. Always use wooden gripper to fully secure carpet on stairs.
5. The CAT sales office is always happy to provide technical advice and assistance on how to measure the rods and eyes.

Made with Precision, Finished with Care

CAT LTD. Units 24 A,B,C, Park Avenue Estate, Luton, Bedfordshire LU3 3BP, U.K.

T: +44 (0) 1582 561 500

email: sales@catflooringaccessories.com

website: www.catflooringaccessories.com