

Product Installation Guide

Product Range

Product Description


Budget Angles

Aluminium and Brass profiles with an unpunched base, suitable for adhesive or grout fixing. Suitable for Timber, Stone & Ceramic and other hard floor coverings at the same level.

Aluminium and Brass Budget angles are available in mill finish. Always check the suitability of the chosen profile on our website or by contacting our sales team.


Please choose the correct profile height to suit the application:

Aluminium Budget Angles

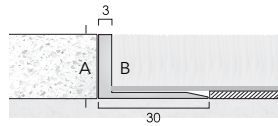


Product Code	A	B
A4.5 BUDGET	4.5	3
A6.5 BUDGET	6.5	5
A9 BUDGET	9	7.5
A13 BUDGET	13	11.5
A16 BUDGET	16	14.5
A19 BUDGET	19	17.5
A22.5 BUDGET	22.5	21
A25 BUDGET	25	23.5

Brass Budget Angles

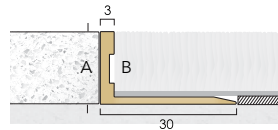


Product Code	A	B
B4.5 BUDGET	4.5	3.3
B6.5 BUDGET	6.5	5.3
B9 BUDGET	9	7.8
B13 BUDGET	13	11.8
B16 BUDGET	16	14.8
B19 BUDGET	19	17.8
B22.5 BUDGET	22.5	21.3
B25 BUDGET	25	23.8


Installation

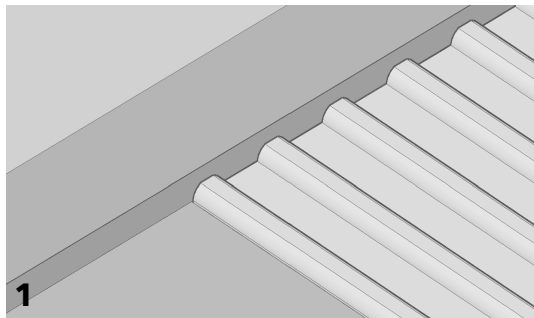


1 Install the flooring against which the angle will be fitted. Using a notched trowel, spread the tile adhesive evenly over the area where the angle is to be positioned.

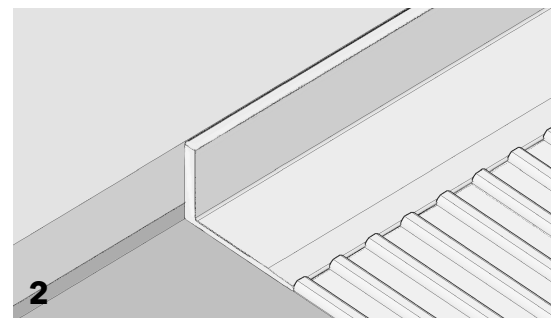

2 Position the angle against the flooring previously installed and bed the profile firmly into the adhesive.

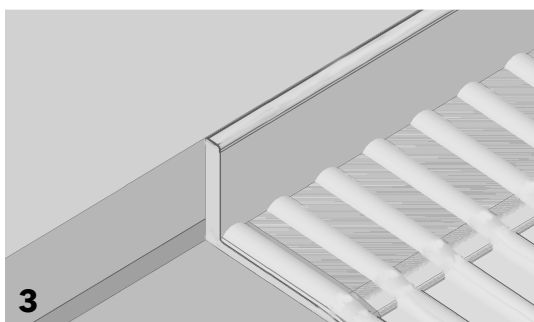

3 Cover the base of the installed profile with additional tile adhesive making sure the base is evenly covered.

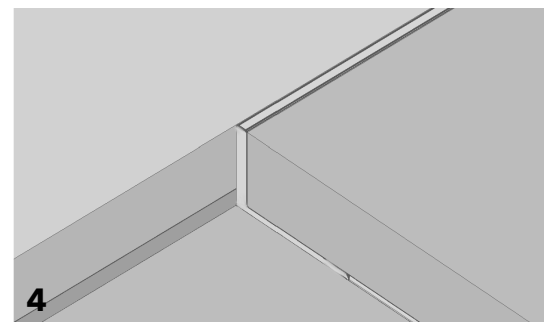

4 Begin laying the flooring leaving a gap for grouting between the profile and the tile.

Any grout should be removed from the surface of the profile immediately.

Made with Precision, Finished with Care

CAT Flooring Accessories, Units 24 A,B,C, Park Avenue Estate, Luton, Bedfordshire LU3 3BP, U.K.

T: +44 (0) 1582 561 500

email: sales@catflooringaccessories.com

website: www.catflooringaccessories.com