

## Product Installation Guide

**Product Range**

**VERTEX® corner protection profiles for external and internal corners**

**Product Description**


We offer a range of aluminium, brass, stainless steel and aluminum chequer plate corner protection profiles supplied with Stick Fix™ tape pre-applied to the internal edges (external corners) or to the external edges (internal corners).

Available in a range of high quality finishes to suit all projects.

Check our current Catalogue or website to see our complete range of Vertex® profiles available.

**Installation:**


Ensure that the corner to which the profiles are to be fixed is in good order, dry and free from dust or any other contaminant that might compromise an effective installation.

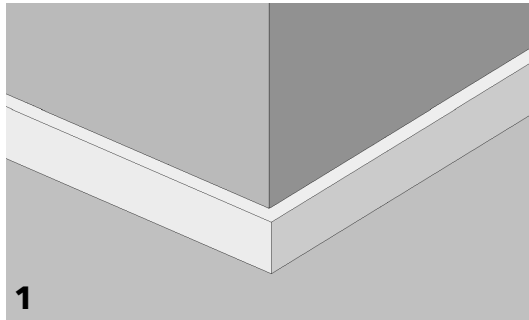

**1**


The corner onto which the ramp profiles are to be affixed must be in good, sound order before commencing installation.

Vertex® profiles are supplied with pre-applied, Stick Fix™ self adhesive tape. Make sure the corner is clean from dirt and dust.

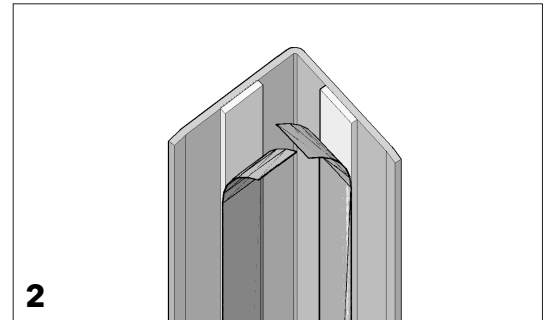

**2**

Peel back the tape cover, and position the corner protection profile into place.

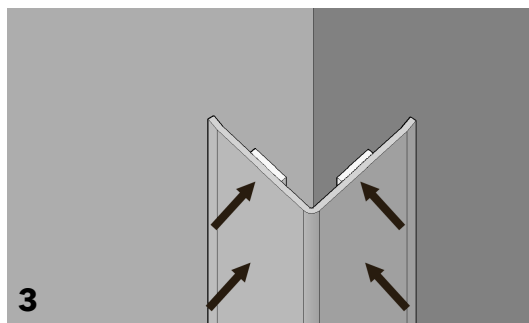

**3**

Press down firmly along the whole length of the corner protection profile and proceed back and forth with pressure until the profile is fixed firmly into place.

Profiles are supplied with a protective tape applied to the surface. We recommend that this tape is left in place until the project is complete.

**Made with Precision, Finished with Care**

CAT Flooring Accessories, Units 24 A,B,C, Park Avenue Estate, Luton, Bedfordshire LU3 3BP, U.K.

T: +44 (0) 1582 561 500

email: sales@catflooringaccessories.com

website: www.catflooringaccessories.com